


MotoRocker

for UltimaBOX


Box firmware upgrade Manual

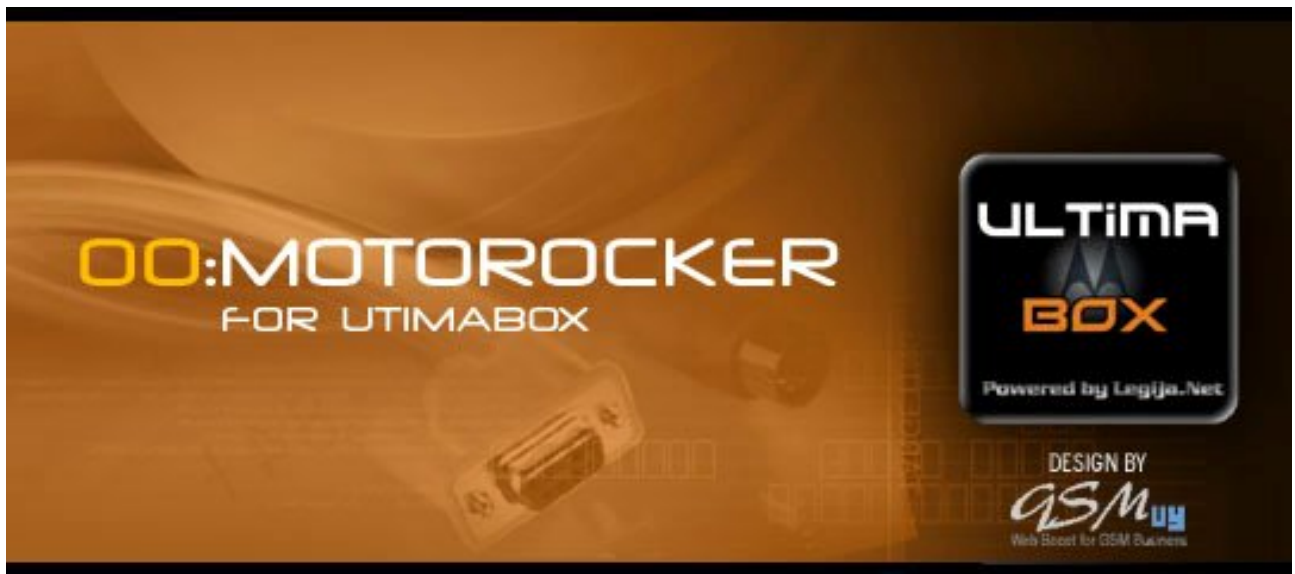

Installing new firmware in UltimaBOX

Start UltimaBOX Service Client.

If You upgrading Ultima Box from V1.08 or lower for first time, Make sure the field in **UltimaBOX Service Client** software *Settings* section ‘Variable Password’ is set to FFFF-FF-FF:

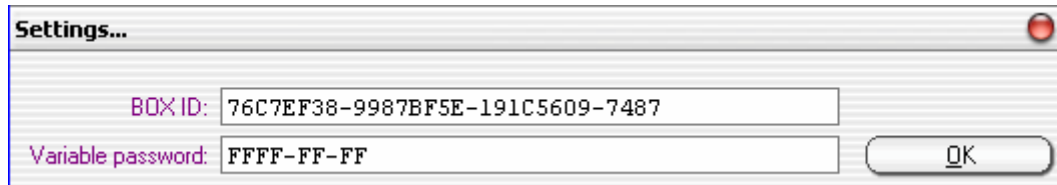


If You upgrading box which is already with V1.10 firmware, read the Box signature from service mode (Enter + Reset) and type it to “Variable password” field.


Each time You connect to server, this password will be changed, and stored to registry. In case You have to use different PC to connect to server – enter service mode in box and read the “Signature” field. This is Your variable password for **UltimaBOX Service Client**.

If you attempt three times to connect server with wrong variable password, your access to server will be blocked, so be carefully to follow all following instructions.

Note, the BOX firmware adapted to work with MotoRocker has limited time of use. Each 32 days it will become deactivated. To reactivate it you’ll have to download new firmware from server and update your box. We apologize for this inconvenience – feature implemented only for antihacking reasons.

1. Download with **UltimaBOX Service Client** software from *UltimaBOX* folder the file “*Firmware_Update_v110.usp*”:

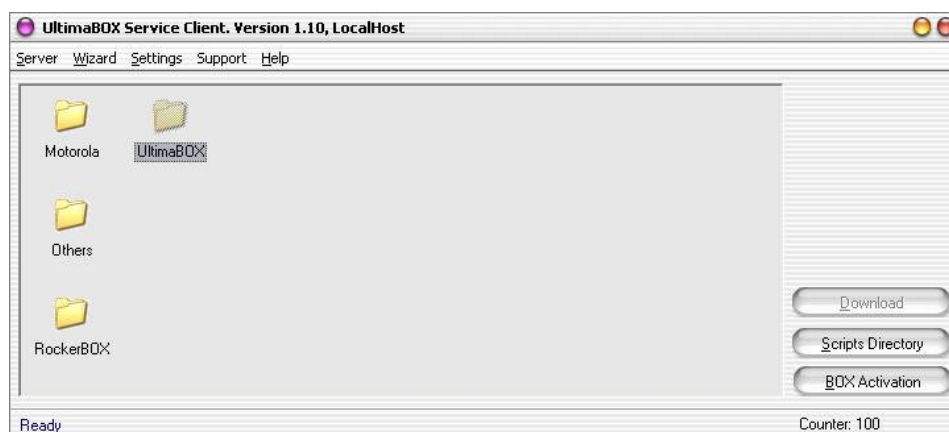

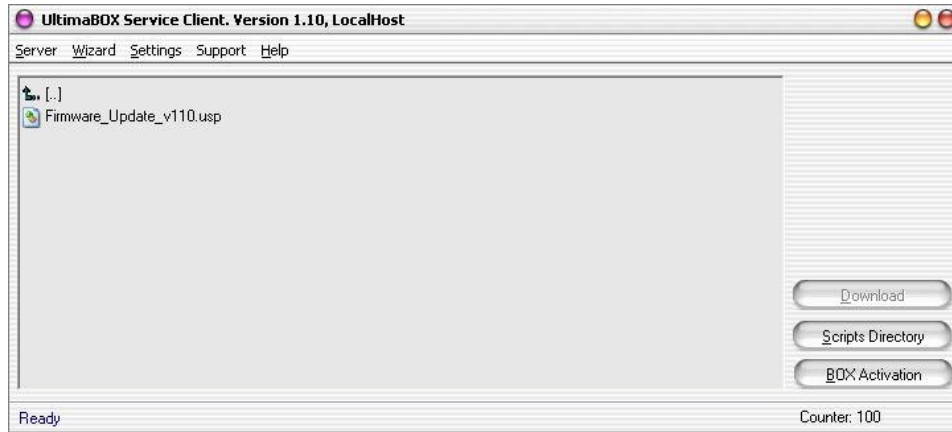

2. Install file to flash stick and make update firmware procedure as usually.
3. Download from **RockerBOX** folder the file “*RFirmware_Update_v110.usp*”. Close **UltimaBOX Service Client** and **do not try** to connect again until following firmware update steps (4..7) will be completed.
4. Install this package to any disk, for example Disk C:
5. Run MotoRocker.exe. Software should automatically rescan available COM ports in your system and find BOX.
6. In MotoRocker’s page ‘BOX Update’ specify path where you have installed the package “*RFirmware_Update_v110.usp*” and select there the file ‘*UpdateSW.rdf*’.
7. Press ‘**Start Update**’ button and wait till firmware update procedure will be completed. Be welcome to use now all functionality of MotoRocker!

To avoid blocking of access please always do

1. Do not download from **RockerBOX** folder firmware files in vain. If you have downloaded file from this folder **make sure** you have updated your box firmware with this file.
2. If you have downloaded new Rocker firmware **do not use client software** until you have updated box firmware with new firmware file.
3. If you got ‘**Variable password is wrong**’ error message after trying to connect to server, **do not try to connect again and again** because in 3 unsuccessful attempts your access will be blocked!!! Instead, take your box, press and hold ‘Enter’ button and shortly press ‘Reset’ button (the procedure to see BOX ID). Please note, you will see below BOX ID other item – ‘Signature’ – copy it’s data to **UltimaBOX Service Client** software Settings section ‘Variable Password’ field.
4. If none of above steps helps, contact us to get this problem solved.